

### Read all instructions before use.

#### Warranty & Service

The warranty covers manufacturing defects and material faults under normal use. The warranty does not cover product misuse or normal wear and tear. For service requests and spare parts, please contact your local retailer or reach us directly via www.kaikuacoustics.fi.

### Safety Instructions & Warnings

- Do not use damaged cables or connectors.
- Avoid exposing the headphones to excessive heat.
- Do not over-bend the headphone frame.
- Listening at high volumes for extended periods may cause hearing damage. Use responsibly.
- Do not attempt to disassemble or modify the headphones. All maintenance and repair must be performed by Kaiku-authorized personnel. Unauthorized disassembly or modification will void the warranty.
- Clean the headphones with a soft, dry cloth only. Do not use water, solvents or alcohol.
- Do not allow water or moisture to come into contact with the head phones.

Model name: Kaiku Wave Battery: 1000 mAh Speaker driver: 40 mm Sensitivity: 110 dBSPL/mW

Impedance: 32  $\Omega$ 

Frequency response: 20–20,000 Hz Battery life: up to 100 hours (60%volume) Bluetooth ver: 5.3

Bluetooth range: up to 12 m



### **Power On**

Press and hold the Power Button for **2 seconds**.

You will hear the prompt sound "Power On", and the green light will illuminate and slowly flash, indicating that the device is powered on. The headphones are in Bluetooth mode by default when powered on.



Press and hold the Power Button for **3 seconds**.

You will hear the prompt sound "Power Off", indicating that the device is powered off. The headphones will automatically power off after 10 minutes with no connection.



### Bluetooth Pairing

When power is off Press and hold the Power Button for **5 seconds** to enter pairing mode.

### ANC On / Off

**Double-press** the Power Button to activate or deactivate ANC.

### Clear Paired Device Records

When power is off, hold the Power Button for **8 seconds**.

### **Music Playback**

Single press to play or pause music.

### **Phone Calls**

Single press to answer an incoming call. Press and hold for 1 second to reject a call.





# Volume up

**Single press** or **press and hold** the Volume up button to increase audio volume.

### **Previous track**

**Double-press** Volume up button to play the previous track.



### Volume down

Single press or press and hold the Volume down button to decrease audio volume.

### **Next track**


**Double-press** Volume down button to play the next track.



## **Headphones Charging**

# Please follow the instructions below carefully and pay attention to electrical safety

- 1. Insert the Type-C charging cable into the charging port and connect the other end to the power source.
- 2. The red light will stay on while charging and will change to green when fully charged.

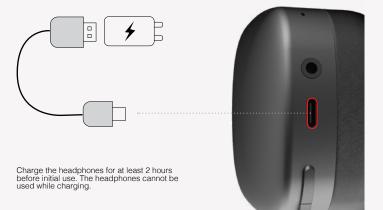

## Do not over bend the headphones.



Do not over-bend or twist the headphones, as this may damage the headband structure or the wooden frame.



# **KAKU**

Manufacturer: Kaiku Acoustics kaiku@kaikuacoustics.fi / www.kaikuacoustics.fi